

Security check

External Control

- 1. Daytime running lights
- 2. Parking lights front and rear
- 3. License Plate Lights
- 4. Dipped lights
- 5. Beam lights
- 6. Taillight
- 7. Turn signals (left and right)
- 8. Foglamp
- 9. Brake light (ask someone to press the brake or back up against a wall if you are alone)
- 10. Back Light (optional)
- 11. Tires (check tread depth, if the tires are damaged and the pressure)

Inner Control

- 1. Seatbelt (pull hard forward, must then stop)
- 2. Horn
- 3. Wip er(flush the window, ensure that the wiper blades are as they should)
- 4. Fan (full strength, adjust so that the air comes in the front window, feel with your hand)
- 5. Foot brake (press up and down on the pedal several times, should not go to the bottom)
- 6. Power functions (press down the brake as much as possible, pull the wheel hard to one side, start the engine, the brakes must then go down and the wheel will flinch and drop)
- 7. Parking brake (when the brake are applied, try to drive forward or reverse, should not be able to run)

Under the Hood

Know where they are and be able to check the level

- 1. Battery
- 2. Brake fluid
- 3. Engine oil and the dipstick
- 4. Antifreeze (glycol and water)
- 5. Washer fluid (washer fluid and water)

Other

- 1. You find the warning triangle in the trunk
- 2. Know how to turn on the defroster if you have fog or frost on the rear window
- 3. Knowing how to change the airflow in the car if, for example driving in a tunnel with a lot of exhaust fumes
- 4. Knowing how to turn on hazard lights and check if any warning light indicates that something is broken.

Caroli Trafikskola Mäster Nilsgatan 20 211 26 Malmö Tel: 040-656 60 60

E-post: info@carolitrafikskola.se

WWW.CAROLITRAFIKSKOLA.SE